# GARDENS OF THE ANTHROPOCENE

# **Build your own Smart Phone Sun Shield**








# **GARDENS OF THE ANTHROPOCENE**

# **Build your own Smart Phone Sun Shield**


## TO BEGIN:

Print a copy of the sun shield template, and arrange it in front of you vertically. The widest vertical section should be positioned on the left, as shown below.

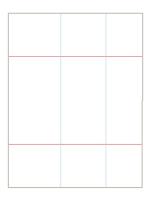


# STEP 1:

Fold along the blue lines of the template; crease well, then unfold the paper so it lies flat.




STEP 2:

Fold along the red lines; crease well.

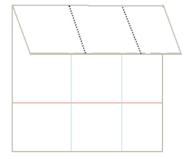


Leave the paper folded, so the top and bottom meet in the middle.

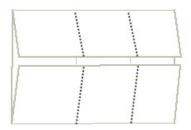


STEP 3:

Fold the bottom corners to meet the creases; the left triangle will be larger than the right.

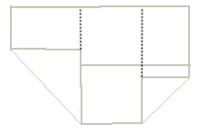


Unfold the larger triangle and lay it flat.

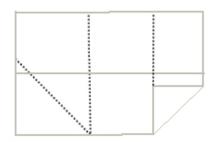

STFP 4.

Repeat Step 3 with the top corners.

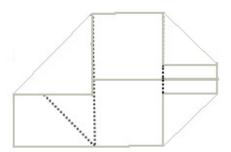




# **GARDENS OF THE ANTHROPOCENE**


# **Build your own Smart Phone Sun Shield**

You should now have two creases on the left corners, and two folds on the right corners, as shown below.

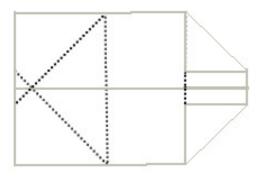


#### STEP 5:

At the centerfold where the two edges meet, fold one edge along the green dotted line shown below, to make a narrow, long flap. Repeat for the other edge.

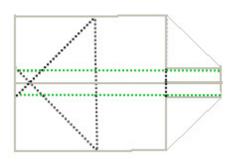


Crease the flaps well and lie them flat open, as shown below.

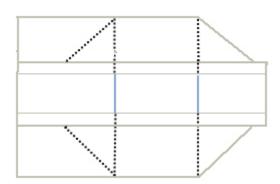

## STEP 6:

To open the box, lift the wider side, folding up along the blue line, and pinch the creases in the large corners together. Push the right side up to 90 degrees to form the other wall of the box.

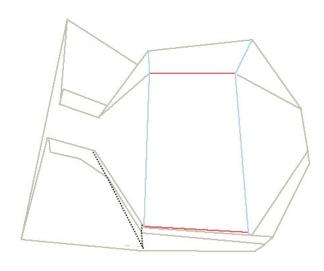

#### STEP 8:

Use tape or staples to secure the hood flaps, and use a pen to poke a hole in line with your device's camera. Place your smart phone in the box, and start exploring *Gardens of the Anthropocene!* 

